

cello

PORTABLE DVD PLAYER

USER MANUAL

PD10

Table of Contents

Safety Precautions	2
Introduction	2
Location of Controls	3
Remote Control	4
Quick Starting Guide	4
Connecting the Earphone	5
Connecting To Optional Equipment	6
Playing Back a Disc	6
Playing Back a DISC with JPEG Files	7
Locating a Specific Title, Chapter or Track	8
Playing Repeatedly	8
Playing In Favorite Order	9
Using the On-Screen Display	10
Selecting the Camera Angle	10
Setting the Parental Lock	11
Customization the Function Settings	12
Trouble Shooting Guide	14

Safety Precautions



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Warning: Risk of electric shock, do not open the battery cover, the back battery cover for your safety.



The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received.

Including interference that may cause undesired operation.

Warning: Do not expose this appliance to rain or moisture, due to the high risk of fire or electric shock. And do not open the cabinet for dangerous high voltages are present inside the enclosure. Only qualified service personnel should attempt this.

Caution: During playback, the disc spins at high speed, so do not lift or move the player, doing so may damage the disc.

CAUTION: This Digital Video Disc Player employs a Laser System. There are no user serviceable parts therefore refer all servicing to qualified personnel. Visible laser radiation when open and interlocks defeated. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

DO NOT STARE INTO BEAM.

Introduction

This new portable DVD player is designed for enjoyment of all forms of disc media. And it has USB and SD/MMC port automatic identification, compatible with various formats of AV files. It's slim shape allows it to be easily carried.

 
This player incorporates the latest digital audio/video (AV) technologies to give you the ultimate in listening and viewing pleasure.

This new player also supports CD, and JPEG. This player also has several unique features, large LCD screen, multi-angle and multi-language, Parental Control (to prevent children from viewing inappropriate content), and Kodak Picture CD compatibility.

Location of Controls


The main screen

Front face

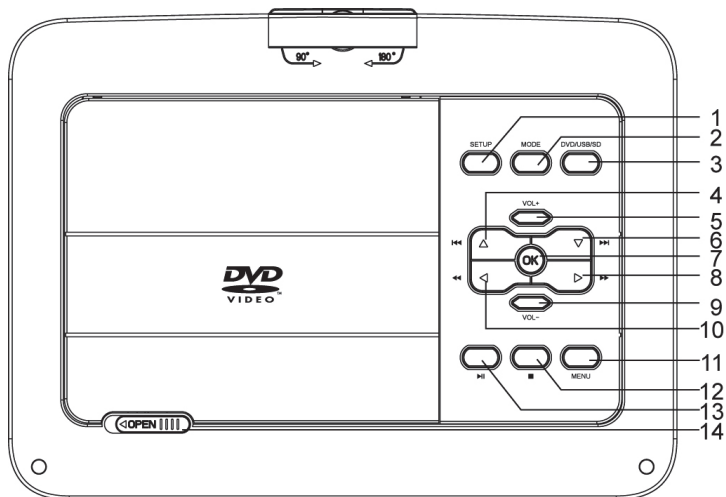

- | | | |
|-----------------------|-----------------------|---------------|
| 1. SETUP | 2. MODE | 3. DVD/USB/SD |
| 4. UP/PREVIOUS | 5. VOL+ | 6. DOWN/NEXT |
| 7. OK | 8. RIGHT/FAST FORWARD | 9. VOL- |
| 10. LEFT/FAST REVERSE | 11. MENU | 12. STOP |
| 13. PLAY/PAUSE | 14. OPEN | |

 
Right side

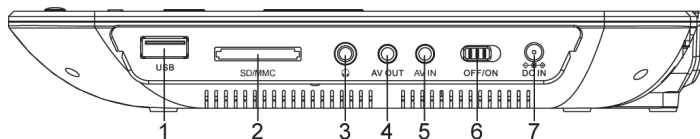

- | | | |
|-----------|-----------|-----------|
| 1. USB | 2. SD/MMC | 3. PHONE |
| 4. AV OUT | 5. AV IN | 6. OFF/ON |
| 7. DC IN | | |


Remote Control

 The remote control

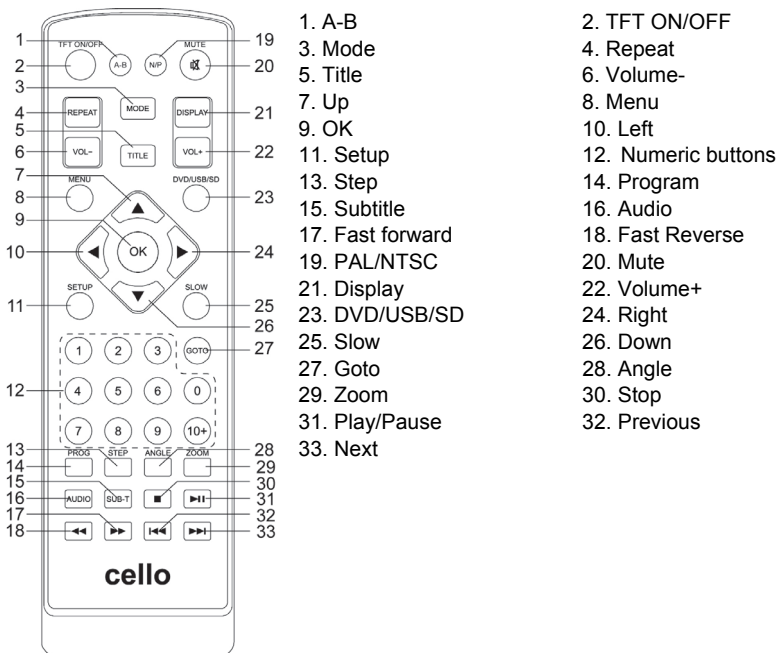

Operating with the remote control

 1. The remote control must point at the remote sensor, in order for the DVD player to function correctly.
2. The remote works best at a distance less than 3 meters and at an angle of up to $\pm 30^\circ$ toward the front of the unit.
3. Obstacles should not remain in between the remote control and the remote sensor on the main unit.

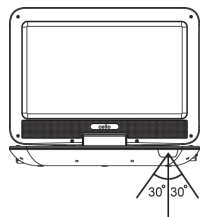

Quick Starting Guide

1. Connecting to an External Power Source

Connect the power adapter (supplied with the player) to the side input plug and to a wall outlet. Do not use any other device otherwise specified by your dealer.

2. Open the screen panel.

The screen panel of the portable DVD opens to a maximum 180° . And it can rotate 270° .

 
3. Push the open button on the left to open the disc cover.

4. Insert a DVD disc with label side facing upward.

Align the center of the DVD disc with the center of the disc guide. Press gently down on the

DVD to snap the disc into place, and then close the disc cover.

5. Slide the power switch on the right side of the unit to power it on.




6. Press the OK or PLAY/PAUSE button on the unit to start playback.

In most cases, when you leave by the PLAY/PAUSE button, continue to be used by PLAY/PAUSE button.

The DVD player will immediately start rendering the DVD program.

When you want to stop, press the STOP button, it will return to the power-on logo.

 The player can be recharged while playback.



USB drive & SD/MMC card playback

- Insert a USB drive into the USB port. Press DVD/USB/SD on the unit or DVD/USB/SD on the remote to play the readable files in it.
- Insert a SD/MMC Card into the SD/MMC Card port. Press DVD/USB/SD on the unit or DVD/USB/SD on the remote to play the readable files in it.

 
NOTE: If it has not any U drive or memory card being inserted in the player, it will return to DVD mode.

Connecting the Earphone

Connecting earphone

1. Connect the earphone. Earphone with a 3.5 mm stereo plug can be connected.
2. Adjust the volume by pressing the VOL+/VOL- buttons on the remote control.

The right side of the portable

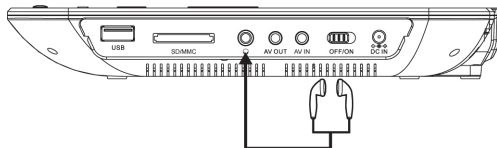



Avoid listening to sound at levels which may be harmful to your ears.

Connecting To Optional Equipment

Enjoy Dolby life.

 Enjoy the dynamic realistic sound of Dolby by connecting an amplifier and speaker system.

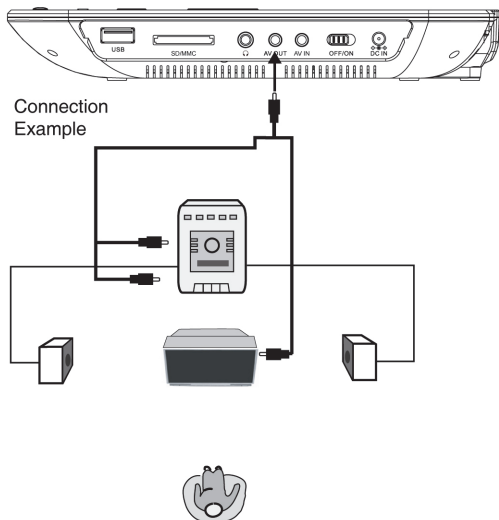

 Adjust the volume of your receiver to a comfortable listening level to avoid any speaker damage.

 
When connecting and disconnecting the DVD video player, turn off the amplifier to avoid any speaker damage.

Playing Back a Disc

How to start playback from the menu screen

1. Press TITLE/MENU to access the menu screen.
2. Press DIRECTION keys to select the title.
3. Press the OK button.

The DVD video player will start play-back from the title selected.

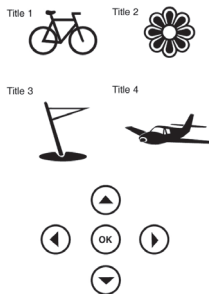

How to step playback (still playback)

 
Press the STEP once during playback.

Press STEP repeatedly during playback, the picture will advance one frame each time, then press OK button to resume normal playback.

During the still playback the sound is muted.

Fast forward & rewind

You can playback a disc at 2x, 4x, 8x, 16x or 32x the normal speed for fast forward or rewind.

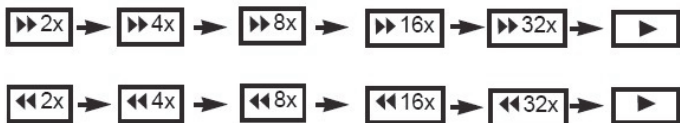

Press the REV or FWD button during playback.

The playback speed becomes double the normal speed.

The playback speed changes, each time you press the REV or FWD button.

 
To resume normal playback, please press the Play / Pause button.

Playing in slow-motion

A disc can also be played back in slow motion.

Press the SLOW button during playback.

TV SCREEN

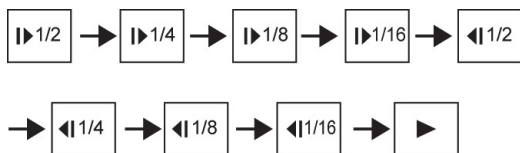

To resume normal playback, please press the Play/Pause button.



During REV, FWD and slow-motion playback, the sound is muted.
The function is invalid on some DVD discs.

 
Playing Back a Disc with JPEG Files

1. Load the disc with JPEG files in the DVD player.
2. Use Up or Down key to select a folder and press OK button to open the file.
3. Press the Repeat button to choose the preferred playback mode (repeat one or repeat all).
4. Use Up or Down button to choose the file you would like to play.
5. Press OK or Play / Pause button to start the playback.
6. During the playback, press STOP or MENU button to view the content.
7. Run in the DVD case, press the ZOOM button on the remote control, ⊕2x→⊕3x→⊕4x→⊕1/2x→⊕1/3x→⊕1/4x→Play

Run in the DVD case, read the Picture. Press the zoom button, Zoom 100%→Zoom 125%→Zoom 150%→Zoom 200%→Zoom 75%→Zoom 50%→Zoom 100% (normal size).

Locating a Specific Title, Chapter or Track

DVD discs are normally divided into titles which are sub-divided into chapters. moreover, VCDs and CDs are divided into tracks.

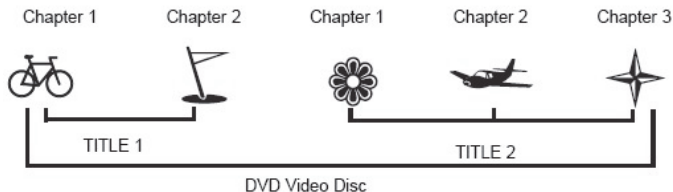

Locating a title using the title menu

You can locate a specific title using the title menu function, if a DVD video disc contains a title menu.

1. Press the TITLE button

On the LCD or TV screen, the title menu will appear.

2. Press the DIRECTION keys to select the title you want.

You can also directly locate a specific title by pressing its assigned number with the number buttons.

3. Press the OK button

This will cause the DVD video player to start playback from chapter 1 of the title selected.

You also can use skip buttons to select a title or track desired: Press **◀◀** or **▶▶** button repeatedly till the one displays.

 
Playing Repeatedly

This DVD player allows you to playback a specific TITLE, CHAPTER, TRACK, or SEGMENT repeatedly.

How to repeat a title, chapter, or disc

During normal playback, press the REPEAT button.

The repeat mode changes, each time you press the REPEAT button.

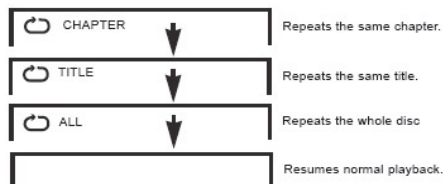

How to repeat a specific segment

1. Press the A-B button at the beginning of the segment in which you want to repeat playback (point A).

 
2. Press the A-B button again at the end of the segment (point B)

The DVD video player will automatically return to point A and start to repeat playback of the

selected segment (A-B).

3. Press the A-B button to cancel the A-B repeat function

The DVD video player will resume to normal playback.

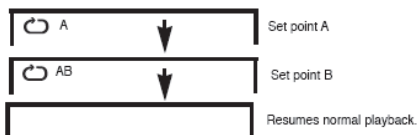


Playing In Favorite Order

How to set titles, chapters, or tracks in a favorite order

1. Press the PROG button.

 PROGRAM MENU displays on the screen.

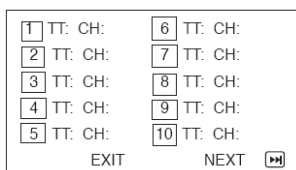


2. Using the numbered button, select the items you want in the order you want them programmed in.

The number of the item selected will be input into the PROGRAM volume.

3. Highlight START and press OK to start program playback.

 4. To clear the programmed, move the cursor to STOP and then press OK to confirm it.

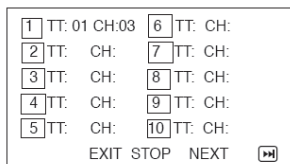


Using the On-Screen Display

This unit allows you to view the operational status on your screen.


Checking the operational status

 With this function you can view on your screen the following: Current title -Track number
-Total playing time.

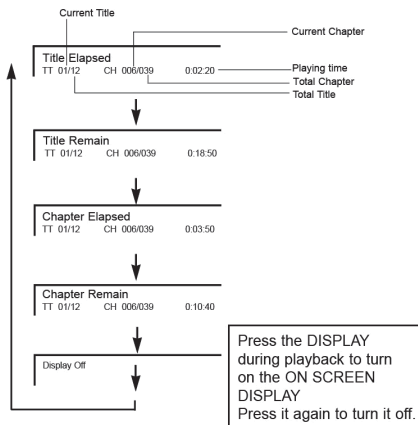

Selecting the Camera Angle

 
This DVD video player allows you to select from several different angles.

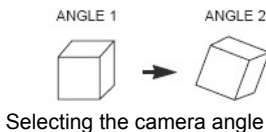

How to change the camera angle

If the DVD video disc was recorded with multiple angles, you have the option to change the camera angle of the scene you are watching.

 When you play back a scene recorded with multiple angles, press the ANGLE button, press ANGLE button repeatedly to change the angle.




Setting the Parental Lock

You can use the parental lock function only with DVD video discs equipped with the parental lock feature.


Setting the parental lock

DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed, you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc all together.

 
1. In no disc player or CD cover is opened.
2. Press **SETUP**, the **SETUP MENU** appears on the screen.
3. Select **Preference Page**, press **DIRECTION** keys.

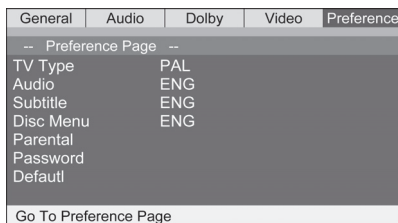

 3. Select **Parental**, press **OK**.
4. Select ratings, press **OK**.

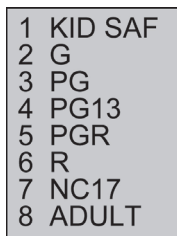

 5. Enter your password then press **OK**. The pre-set password is 136900.



6. Press **SETUP** to exit setup.

To change your password

1. In the setup menu, highlight the lock icon (the 3th one on the top) and enter it.
2. Enter old password.
3. Enter new password.
4. Re-enter to confirm your new password.
5. Press OK.
6. Press SETUP to exit.

Old Password	<input type="text"/>
New Password	<input type="text"/>
Confirm PWD	<input type="text"/>
<input type="button" value="OK"/>	

Customization the Function Settings

This unit allows you to customize the performance to your personal preference.

1. Press SETUP.
2. Press DIRECTION keys to select category (highlight), then press OK.
3. Press SETUP to quit the menu.


General Setup

General	Audio	Dolby	Video	Preference
-- General Stetup Page --				
TV Display	Wide			
Angle Mark	On			
OSD Lang	ENG			
Screen Saver	On			
Last Memory	Off			
Go To General Setup Page				


Audio Setup

General	Audio	Dolby	Video	Preference
-- Audio Setup Page --				
Downmix	STR			
Go To Audio Setup Page				

 
Dolby Setup

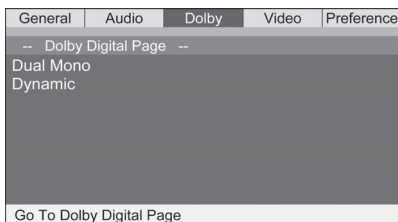

 Press DIRECTION keys to choice according to confirm the menu.

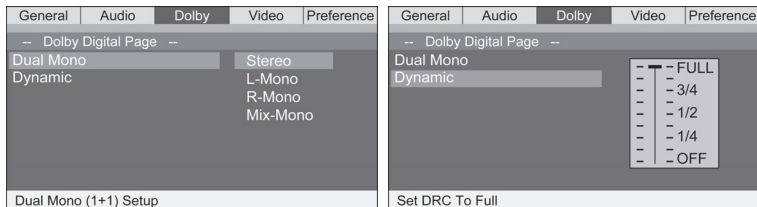

Video Setup

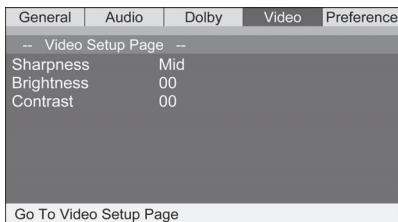 

Note:

To access preference menu, first should In no disc player or CD cover is opened

Trouble Shooting Guide

Symptom	Correction
No power	<ul style="list-style-type: none">• Check if the AC adapter or power plug is connected securely.• If powered with the battery, check if it is exhausted.
No picture/sound	<ul style="list-style-type: none">• Make sure the connection is in good condition; volume is not too low; audio setting is proper.
The player does not start playback	<ul style="list-style-type: none">• The DVD+-RW you played should be finalized, and not be an empty disc.• Place the disc with the graphics side upward and make sure it's secured with the guide.• Make sure the disc is free from scratches & fingerprints.• Insert a playable disc. (Check the disc type and color system).• Do not playback a disc which region code is different from that of your player.• Clean the disc.• Cancel the parental lock function or change the parental lock level. (The Pre-set password is 136900.)• Reset the player.