

**DVB-T2**

# **PORTABLE LED TV**

## ***USER'S MANUAL***



Please read this User's Manual carefully before use

## Content

1.Safety Precautions . . . . .	1-2
2.Rear View and Sockets . . . . .	3
3.Front / View and Controls . . . . .	4
4.Remote control . . . . .	5-6
5.Connection with External Devices . . . . .	7
6.Description of the Operating Menu . . . . .	7-9
7.USB Function Operating Instruction . . . . .	10-11
8.Common Troubleshooting . . . . .	12
9.Technical Specifications . . . . .	13

## 1.Safety Precautions

### 1.1 Storage

- This product shall be kept far away from too high or too low temperatures. This product shall be stored at -20°C-60°C and its working temperature shall be -5°C -40°C.
- Do not use this product in wet environment, such as in a bathtub, wash basin, kitchen, sink or basement, swimming pool, etc.
- Do not place TV in an environment with high humidity, dust or full of mist.
- Do not drop or throw this product.  
Avoid strong vibration of the machine to avoid the strong collision with other objects.
- Do not squeeze or scratch the product with sharp objects.
- The rear recess of the product and the opening in the shell are used for ventilation, at the same time, they are used to ensure the reliability of components and components and avoid overheating. Do not place the TV and power adapter in bed, on sofa, carpet or other similar surface to avoid blocking the radiator opening. Do not place the television and the power adapter near or on heater or heat sources unless it is equipped with a complete ventilation device; The television and power adapter are prohibited from being placed in an insert-type installation device.
- When in use, make sure the TV is at least 3 inches (76 mm) away from walls or other objects.
- Please use the specified type of power on the TV label. If you have questions about the type of power source that shall be used, please consult your dealer or local power supply department.
- Make sure that the power plug and wire you are using can withstand the sum of the rated current of all the powered products.
- Do not place the TV in a place where users can easily touch it.
- All the notes and instructions in the guide shall be observed.
- Do not overload the power plug or extend the power cord, otherwise it may cause fire or electric shock.
- Do not fix the TV without authorization, because the cabinet is subject to high voltage or other hazards. Qualified service personnel shall be required to repair the TV.
- Please unplug the power adapter from the socket and ask qualified service personnel for repair if:

## 1.2 Maintenance

- Before cleaning, first, disconnect all the cables of this device.
- Wipe the case, screen and keys with a soft cloth soaked with a small amount of mild detergent.
- When cleaning the TV, do not use polishing cloths, disinfectants or any kind of fuel or chemical cleaners such as alcohol and gasoline, etc.

### Attention !

 
To ensure your own safety and the safety of the people around you, do not watch TV or turn on the TV receiver.  
It's dangerous to watch a TV program or use a TV receiver when driving a car.

## Special Instruction

Bright spots and dark spots may appear on the screen. This is normal and related to active matrix screens and is not a symptom of failure. Do not try to conduct technology maintenance yourself. If anything goes wrong, turn the TV receiver off and contact us or your dealer. The device contains a large number of small electronic components.


Disassembly or modification may cause damage or breakdown to the device.

## 2. Rear View and Sockets

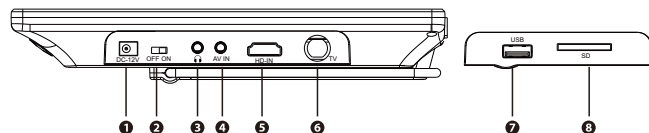

Socket	Description
1 DC 12V	To connect to 12V power supply
2 POWER ON/OFF	To turn on the TV and turn the TV off
3 Headphone out	To connect to the earphones
4 AV IN	AV IN by AV cable
5 HDMI IN	To connect to a High-Definition(HD) signal output device, such as a set-top box.
6 TV	To connect to the aerial socket on the wall with the RF coaxial cable
7 USB	Allows the insertion of a USB storage device to play video, audio, photo and text files (Media mode) and record DTV programmes on to a USB storage device.
8 SD slot	Allows the insertion of a SD storage device to play video, audio, photo and text files


## 3. Front / View and Controls

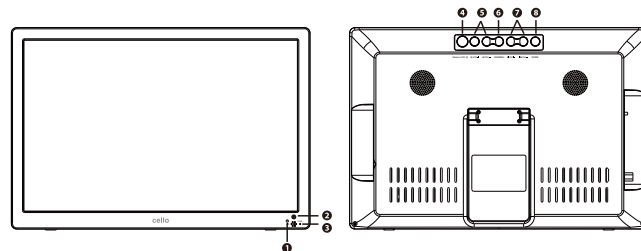 

Item	Description
1 POWER LED	Illuminates green when the TV is turned on. Illuminates red when the TV is in standby mode. The LED will alternate between red and green when the PVR timer programming has started in the standby mode
2 IR(Infrared Receiver)	Receives IR signals from the remote control. Do not put anything near the sensor, as its function may be affected.
3 Charging Indicator	Charging Indicator :when charging, the indicator light will show red, and the light will go out when it is fully charged
4 Retour LCD/ ⏮	Short Press to return to the previous screen Long press to power on/off the LCD screen
5 ⏮ VOL- / ⏭ VOL+	Adjusts the volume. Press to select and adjust a setting in the OSD menu.
6 OK/MENU	OK: OK to select, and play /pause function MENU: display the OSD menu
7 ⏮ CH- / ⏭ CH+	Press to select a channel or select a sub-menu from the OSD menu.
8 MODE	Press to select among different input signal sources: DTV/ATV/AV/HDMI/USB/CARD


4.Remote control

 Dependant on the Model of the TV some keys will have no function

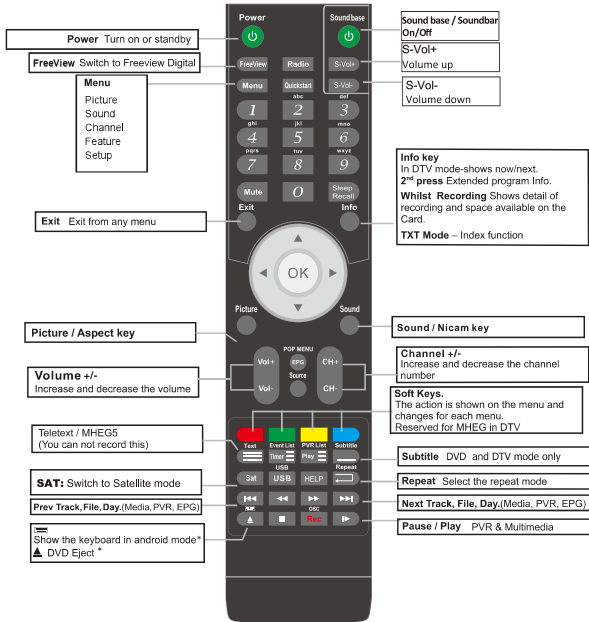

\*Dependant on Model

 ■ Functions of remote control buttons  
Dependant on the model of the TV some keys will have no function

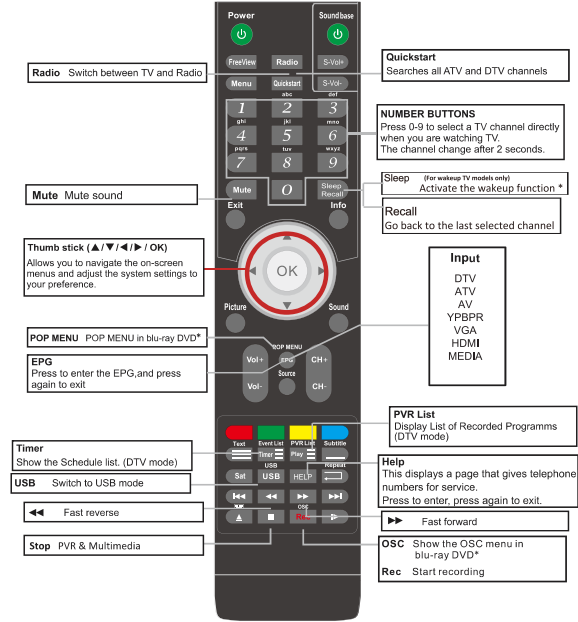

\*Dependant on Model

## 5.Connection with External Devices

### ● Audio - Video input signal

Audio-Video Cable Access: Plug the audio-video plug into the audio-video input port and press the INPUT Key. At this point, the input of audio-video signal is complete and the AV symbol is displayed on the screen.

### ● Connecting Headphones

To use headphones to listen to music, first volume down, and then insert the headset, adjust to the right volume. When using headphones, the volume shall not be too large, so as not to hurt the hearing.

### ● Connecting to AC Power Supply

Plug the AC adapter's AC plug into the power supply (100-240 V, 50-60 Hz AC) socket and the AC adapter's DC plug into the 12 V DC input port. (12 Volt Car Charger can be used for this device).

### ● USB/ Micro SD CARD Play

Insert a USB / Micro SD card into the device and select USB / SD format as the format of the image / audio / video card included in the card (memory capacity shall be 32G or less).

## 6.Description of the Operating Menu

### 6.1 Select the Input Signal Source

- A. Press "INPUT" key , the input signal source details appear
- B. Press "▲ / ▼ " key , select the signal source , press ENTER Key to confirm the choice
- C. TV would switch to the mode that you choose

### 6.2System Menu Setup

- A. Press the Menu Key , to enter system setting menu for system setup.
- B. Press direction Key , to choose sections.
- C. Press ► / ENTER Key to enter the submenu and choose the option in the menu
- D. Choose the option and press the Enter Key to confirm and finish the system setup
- E. Press MENU, return to the main menu
- F. Press STOP/ EXIT Key, to exit the system setup mode.

**Attention:** If the option is gray, it means the item cannot be set in this mode, please select the options available.

### 6.2.1PICTURE

- Press MENU Key , the main menu appears , then press key to choose Picture Menu
- Picture Menu: Personalized /Dynamic/Standard/Mild.
- Color Temperature: Personal/cold/Normal/Warm.
- Aspect Ratio: Auto/16:9/4:3
- Noise Reduction: Low/ Middle /High/Off.
- Screen: Adjust PC picture position

### 6.2.2SOUND MENU

- Press MENU Key , the main menu appears , then press key to choose Sound Menu
- Sound Mode: Standard/Music/Movie/Sports/Personal.
- Balance: Adjust the volume of the left and right loudspeaker
- Auto Volume: under this mode, the fast adjustment would switch to smooth adjustment
- Surround Sound: SURROUND /OFF.

### 6.2.3TIME MENU

- Press MENU Key, the main menu appears, then press Key to choose Time Menu
- Clock: Adjust the time part : Day Month/ Year/ Hour/ Minute.
- Off Time: Setting 60s before off
- On Time: Setting to turn off after some minutes (enter the sleeping mode)
- Sleep timer:240/180/120/90/60/30/20/10
- Choose Time zone

### 6.2.4 OPTION MENU

- Press MENU Key, the main menu appears, then press Key to choose Option Menu.
- OSD Language: select display OSD Language
- Audio Language: setting the audio language
- Subtitle Language: setting up the subtitle language
- Restore Default : restore all default settings

### 6.2.5 LOCK MENU

- Press MENU Key, the main menu appears, and then press ▲ / ▼ Key to select Lock Menu.
- Before entering settings, please enter the default password (0000) to enter the set value.
- Lock System: Enter the password to lock up the critical system settings, such as program searches. Before restoring defaults, you shall enter the password and then make the system settings.
- Cancel LOCK: Unlock.
- Set Password.
- Block Channel: Indicates the channel you want to lock.
- Parental Guidance: Set the age level of the television program (Age 4-18).

### 6.2.6 CHANNEL

 
Search for TV Programs :

- 1) Select DTV / ATV mode.
  - 2) Press MENU Key, select Auto search / ATV Manual Search mode to find the TV program.
  - 3) Select Auto Search and select Search Type: DTV + ATV / DTV / ATV. Then select your country, press Enter to start auto search.
  - 4) Press CH + / CH- Key after Auto Scan is completed to select the desired program.
- Channel Edit: Set DTV / ATV and channel information.
  - Signal Information: Check information about the television signal.

## 7.USB Function Operating Instruction


USB Mode (Multimedia).

- Press "INPUT or USB" Key to display the input source list, then press Key to select the source, press ENTER Key to confirm and display the multimedia mode. The color of the icon indicates if there is a TV USB DRIVER. Yellow: Yes; Gray: No.
- Press ◀ ▶ Key to select the type of media (Photo/Music/Movie/Text) you want to play. Press ENTER to confirm, and press Key to move to the directory and select what you want to play.
- Select C and press "ENTER" Key to enter the submenu.

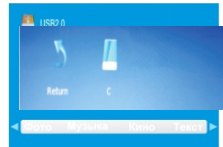


### 7.1 PHOTO PLAY

 - Insert the USB DRIVER into the USB slot.
- Press "◀ / ▶" Key, select the picture and press "ENTER" Key to enter the submenu.
- Select C and press "ENTER" Key to enter the submenu.
- Select a picture, press Key to display the picture, press Key to display the last image played, and press Key to display the next image to be played.
- Press "STOP / EXIT" Key to exit.

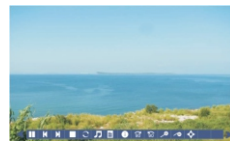

## 7.2.MUSIC PLAY

 - Insert the USB DRIVER into the USB slot.
- Press “◀ / ▶” Key, select MUSIC and press “ENTER” Key to enter the submenu.
- Select C and press “ENTER” Key to enter the submenu.
- Select music, press Key to display, press Key to display the last song played, and press Key to show the next song to be played.
- Press “STOP / EXIT” Key to exit.

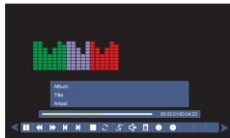


## 7.3.MOVIE PLAY

- Insert the USB DRIVER into the USB slot.
- Press “◀ / ▶” Key, select Movie and press “ENTER” Key to enter the submenu.
- Select C and press “ENTER” Key to enter the submenu.
- Select movie, press Key to display, press Key to display the last section played, and press Key to show the next section to be played.
- Press “STOP / EXIT” Key to exit.



## 7.4.TEXT PLAY

 - Insert the USB DRIVER into the USB slot.
- Press “◀ / ▶” Key, select TEXT and press “ENTER” Key to enter the submenu.
- Select C and press “ENTER” Key to enter the submenu.
- Select TEXT, press Key to display, press Key to display the last page played, and press Key to show the next page to be played.
- Press “STOP / EXIT” Key to exit.

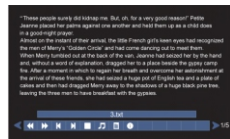

## 8.Common Troubleshooting

The following phenomenon does not mean that the display has problem. Please check the following items before asking for help from the maintenance department.

Phenomenon	Ttroubleshooting
No image or sound	1.Unauthorized power supply is in use. 2. The power switch, monitor or remote control is off.
No image on TV	1. Check if the right channel has been chosen. 2. Still under the multimedia mode, please change to TV mode.
No sound	1. Sound is off or the sound system is not properly set.
Blurry or unstable image	1. Check is the antenna is correctly connected; 2. Ground signaling is too weak
Ghosting	1. Nearby buildings or top places reflects signals.
Snowflake	1.Car or train electromagnetic radiation; 2. High-voltage lines or neon lighting radiation.
No color	1. Check if the color setting is correct. 2.Check if the color system setting is correct
Unable to play USB Memorizer	1.Make sure the USB has been correctly open 2. Check USB DRIVER format
No sound when connected to other devices	1. Check if the connection with other devices is correc 2. Check the input status of the corresponding device
Remote control does not work	1.Check if there is battery inserted; 2.Check the battery status;

## 9.Technical Specifications

A

- Full support for Russian analogue / digital TV system DVB-T and DVB-TC.
- Analog TV band range: 48.25-863.25 MHz (for all TV channels).
- Input Frequency: UHF 177.5 MHz-226.5 MHz, UHF 474 MHz-866 MHz.  
Modulation: QPSK / 16-QAM / 64-QAM / 256 QAM.
- Decoding Standard: The decoding standard for HL is MPEG1,2MP, the decoding standard for L5HD is MPEG-4 SP & ASP, Divx13.11; 4.x; 6.x.
- Image Format: JPEG, BMP, PMG.
- Audio format: MP3, WMA.
- Video Format: MKV, AVI, DIVX, XVID, MOV, VOB, FLV, 3GP, DAT, MPEG, MPG, MP4, TS, TRP.



## **Basic Specifications**

- Display: color TFT LCD
- Screen Size: 14.1inch
- Aspect Ratio: 16:10
- 14.1inch resolution :1280\*800
- Speaker: 2 x 2 Watts
- Power: 12V DC
- Battery: 2500 mAh, 18650, up to 2.5 hours of use;
- Socket: Input Socket for External Antenna; Stereo Headphone Connecting Port; Audio / video input port (AV); USB port
- AC Power - AC Adapter
- Power Consumption : 18W
- Working Temperature : -5°C to 40°C
- Storage Temperature : -20°C to 60°C

## **Notice:**

- This manual is for reference only. The information in this manual is subject to change without notice. The right to clarify any unknown conditions, errors or omissions is reserved by our company.
- No part in this device can be repaired by user. It is forbidden to attempt to open the device housing to remodel the television receiver. Internal components at high voltage can be hazardous to health. Equipment maintenance and adjustment shall be carried out by specialists.
- To avoid personal injury, the product shall be securely fastened to the floor / wall according to the installation instructions.
- Do not drip or splash water on this device. Do not place any objects containing liquids such as vases on this device.
- Do not place sources of ignition such as lighted candles on the device.
- Do not expose this device to extreme heat, such as direct sunlight, flames, etc.